

**Oxo Easy chopper**

- 817119

The food mincer is easy to use, with a large non-slip push button that allows user's to chop food in a single motion. The rotating button allows user's to mince food with several presses. The integrated blade makes it easy to remove food from the sides. Container with lid for storing food. Stainless steel blade. Dishwasher safe.

Height : 20 cm.  
Capacity : 200 g.

**Date d'impression :** 06/02/2026