

## Oxo Easy chopper



The chopper is easy to use, its large non-slip push button allows you to cut food in one push. The rotating system of the button allows the food to be chopped in several presses. The integrated flap makes it easy to retrieve the food from the wall. Container with lid for storing food. Stainless steel blade. Dishwasher safe.

Height 20 cm. Capacity 200 grs.

- 817119

**Date d'impression : 11/04/2025**