

## **Smart touche freestanding can opener**



- Removable blade for washingEquipped with a bottle opener

Completely automatic: press the button and it opens a tin. No more struggling with stiff pull tabs when preparing your meals. Very hygienic system: the blade is removable and dishwasher safe. Equipped with a bottle opener at the end.

Requires 2 AA batteries (not included).





- 817292

**Date d'impression :** 16/11/2025