

## Smart Touch freestanding can opener



- 817292

- **Detachable blade part for washing**
- **Bottle opener at the end**

Completely autonomous: press the button, and it opens your tin on its own. No need to pull on a lever that's too hard to prepare your dishes. Very hygienic system: the blade part is removable to put it directly in the dishwasher. It has a bottle opener at the end.

Requires 2 AA batteries (not included).